

## CAMERA WI-FI & VIDEO REMOVAL

## WI-FI REMOVAL

Most Canon camera's can have the Wi-Fi removed. (without opening the Camera)

## **VIDEO REMOVAL**

The following camera's we have the option of removing the Video Recording & Player in addition to the Wi-Fi:



| IXUS 132 | SX280         |
|----------|---------------|
| IXUS 135 | SX 530        |
| IXUS185  | SX610         |
| IXUS 285 | SX620         |
| ELPH 115 | SX700         |
| ELPH 135 | SX710         |
| ELPH160  | SX720         |
| ELPH 170 | SX730         |
| ELPH180  | SX740         |
| ELPH190  | G7 X Mark II  |
| ELPH350  | G7 X Mark III |
| ELPH360  | G9 X          |
| SX240    | G9 X Mark II  |
| SX260    | <b>G15</b>    |